


7-WAY CONNECTOR

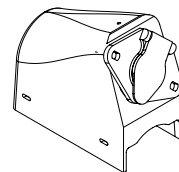

6-WAY CONNECTOR

## 31060 — 6 & 7 WAY ELECTRICAL CONNECTOR BRACKET

### PARTS IDENTIFICATION:

A) Electrical connector bracket

B) Heavy duty tie wraps

C) Self tapping screws

#10 X 3/4" (4)

A) Attelage de connecteur électriques

B) Courroies d'attache en plastique

C) Vis Autotaraudeuse

**TOOLS REQUIRED:** 5/16" nut driver, drill & side cutters

**OUTILS REQUIS:** manche a rochet de 5/16", perceuse, ciseaux.

### INSTRUCTIONS:

- For new installations route the wiring through the large hole in the electrical connector bracket (A).
  - For prewired applications cut electrical connector bracket (A) along the notch located below the large hole on the inside, spread bracket apart and slide over the existing wiring.
- Attach electrical connector to the bracket (A) using the supplied screws (C).
- Mount electrical connector bracket to the receiver assembly in the desired location using the heavy duty tie wraps (B). Clip the ends off of the tie wraps (B) using side cutters.
- Pour installations nouveau, guidez les fils a travers le grand trou dans l'attelage (A).
  - Pour installations existant, coupez l'attelage a long de l'entaille dessous le grand trou dans l'attelage. Ecarte l'attelage et guidez les fils entre l'attelage.
- Attachez le connecteur électrique a l'attelage en utilisant les fixations fournis (C).
- Attachez l'attelage au remorque en utilisant les courroies d'attache en plastique (B). Coupez les bouts des courroies avec une paire de ciseaux apres l'installation.

For fit problems call 1-800-461-5595 / Pour assistance au cas de problèmes d'ajustement, appelez 1-800-461-5595