




SERVICE BULLETIN

12,000 lb. Jack Replacement Kits

Cequent offers replacement part kits for 12,000 lb. square jacks produced from 1991 to the present. See the illustrations below to determine which kits are required for your jack. See the following pages for diagrams showing the kit assemblies.

1991- APRIL 2003 (D03) Cast Iron Nut

Use kit **500212** for gears, bushings, and pins.

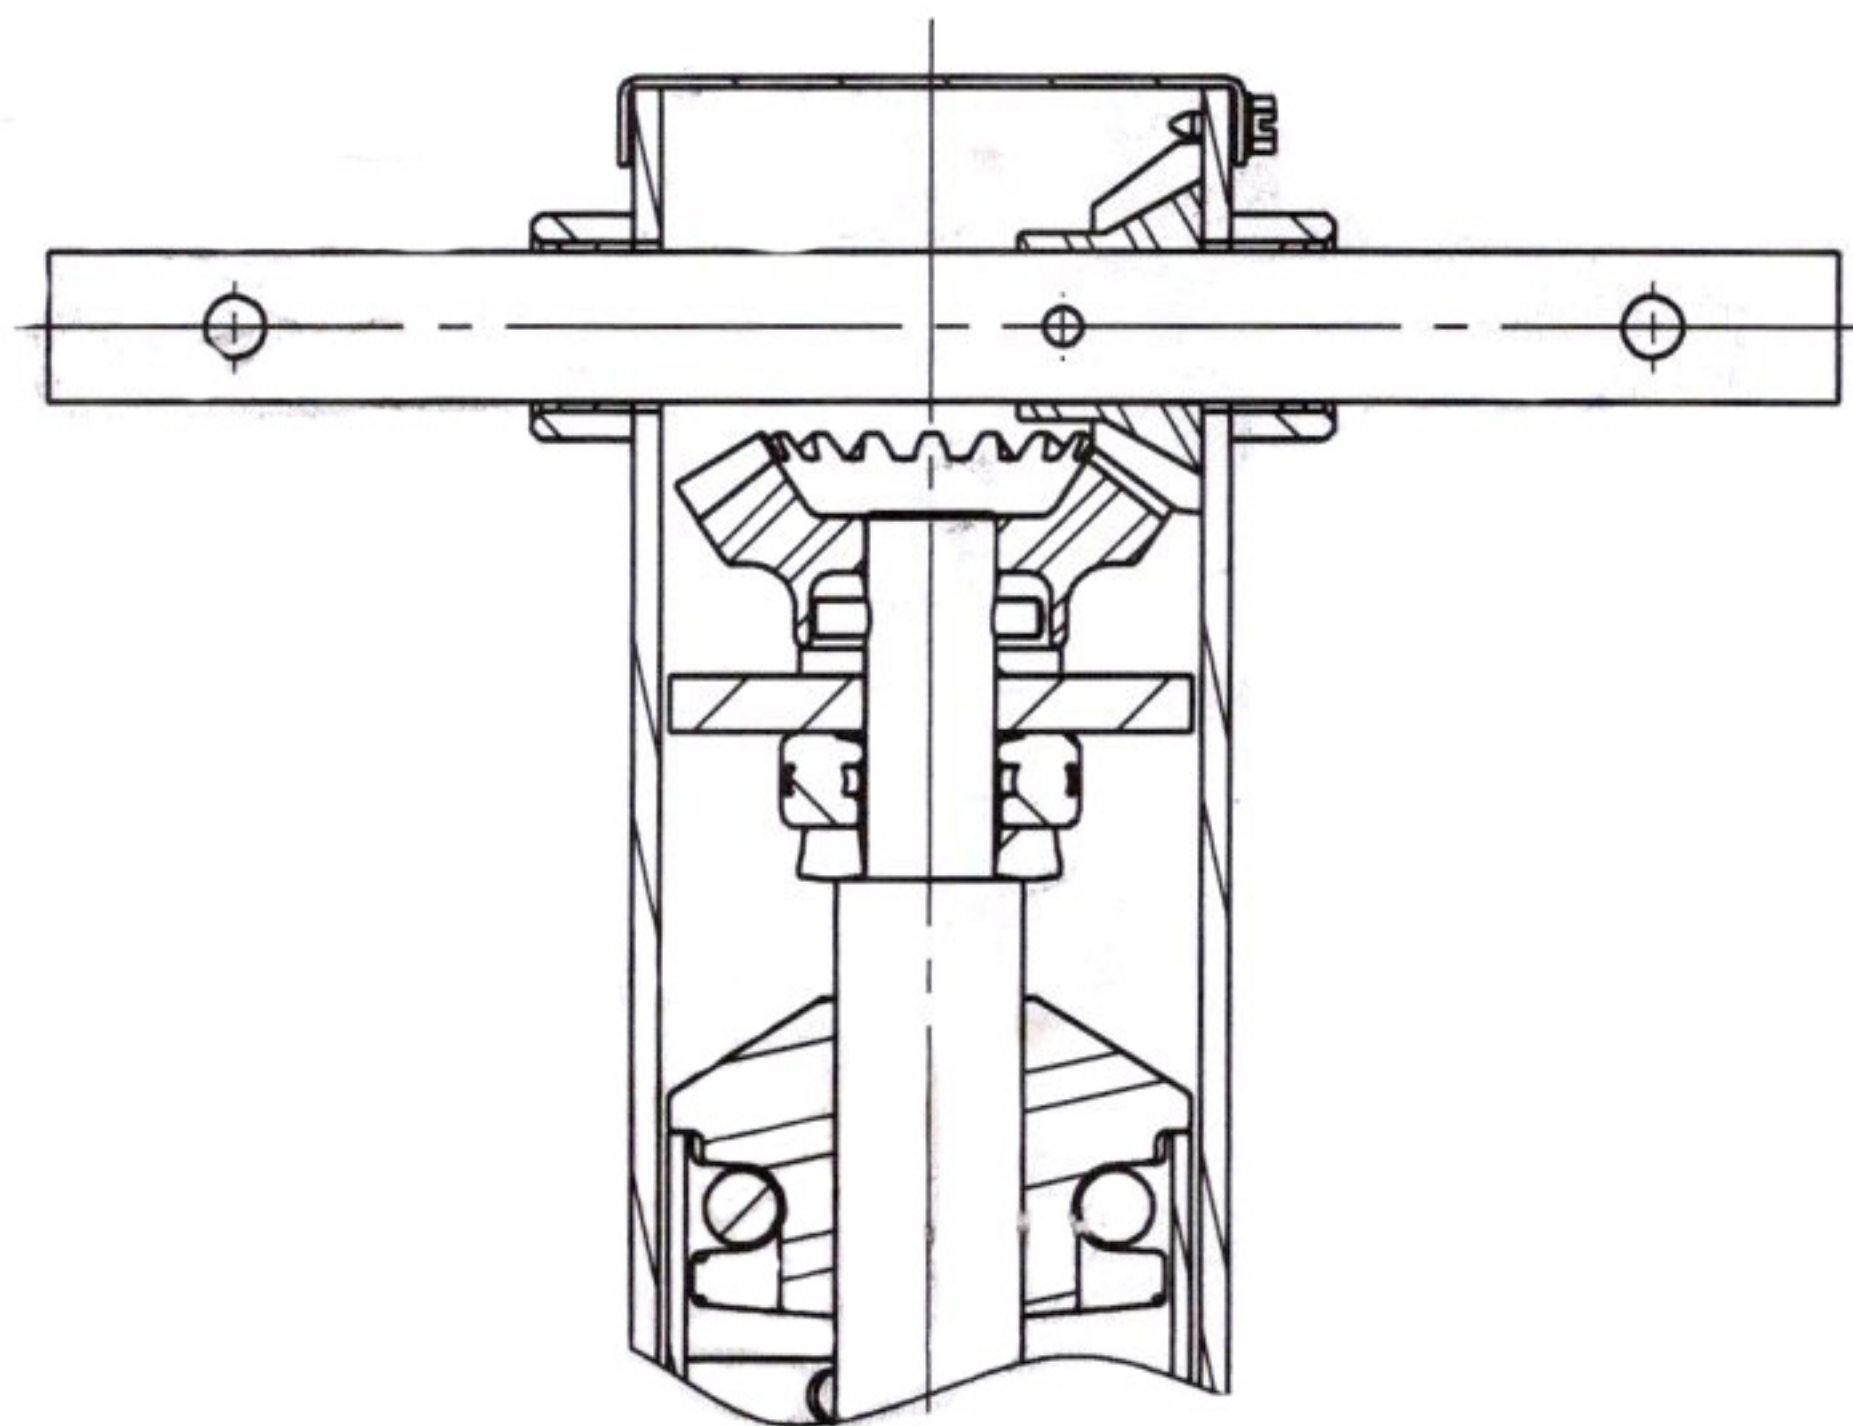


APRIL 2003 (DO3) and newer PM Nut

Use kit **500212** for gears, bushings, and Pins.


Use kit **500217** for screw & nut, bearing, support washer, and retaining pins

If your jack is April 2003 to April 2006, you will need both kits 500212 & 500217.

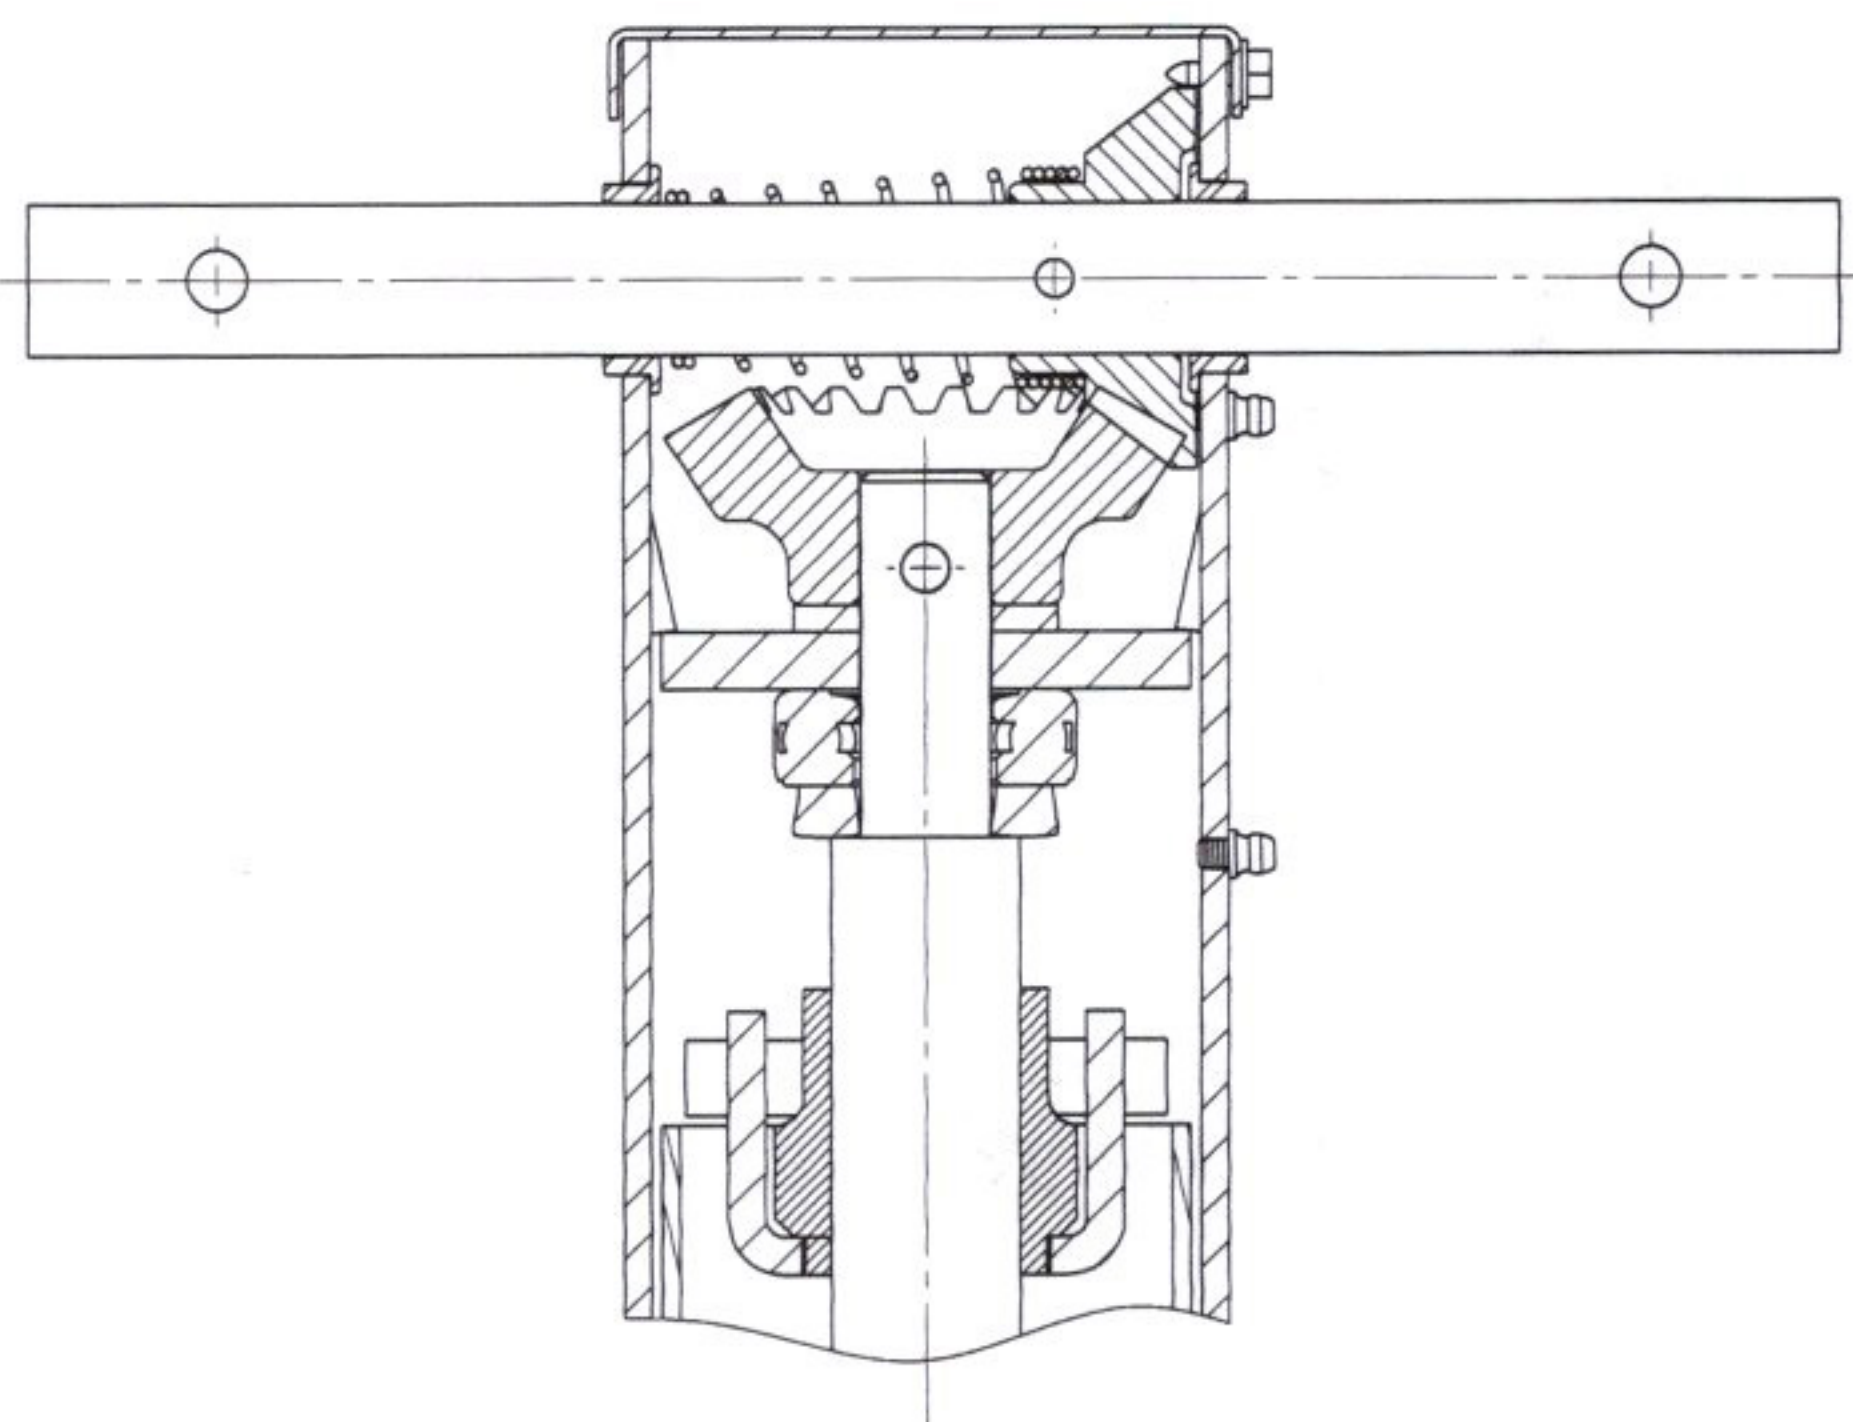

Gear Kit P/N 500212

(April 03 to Dec 04)

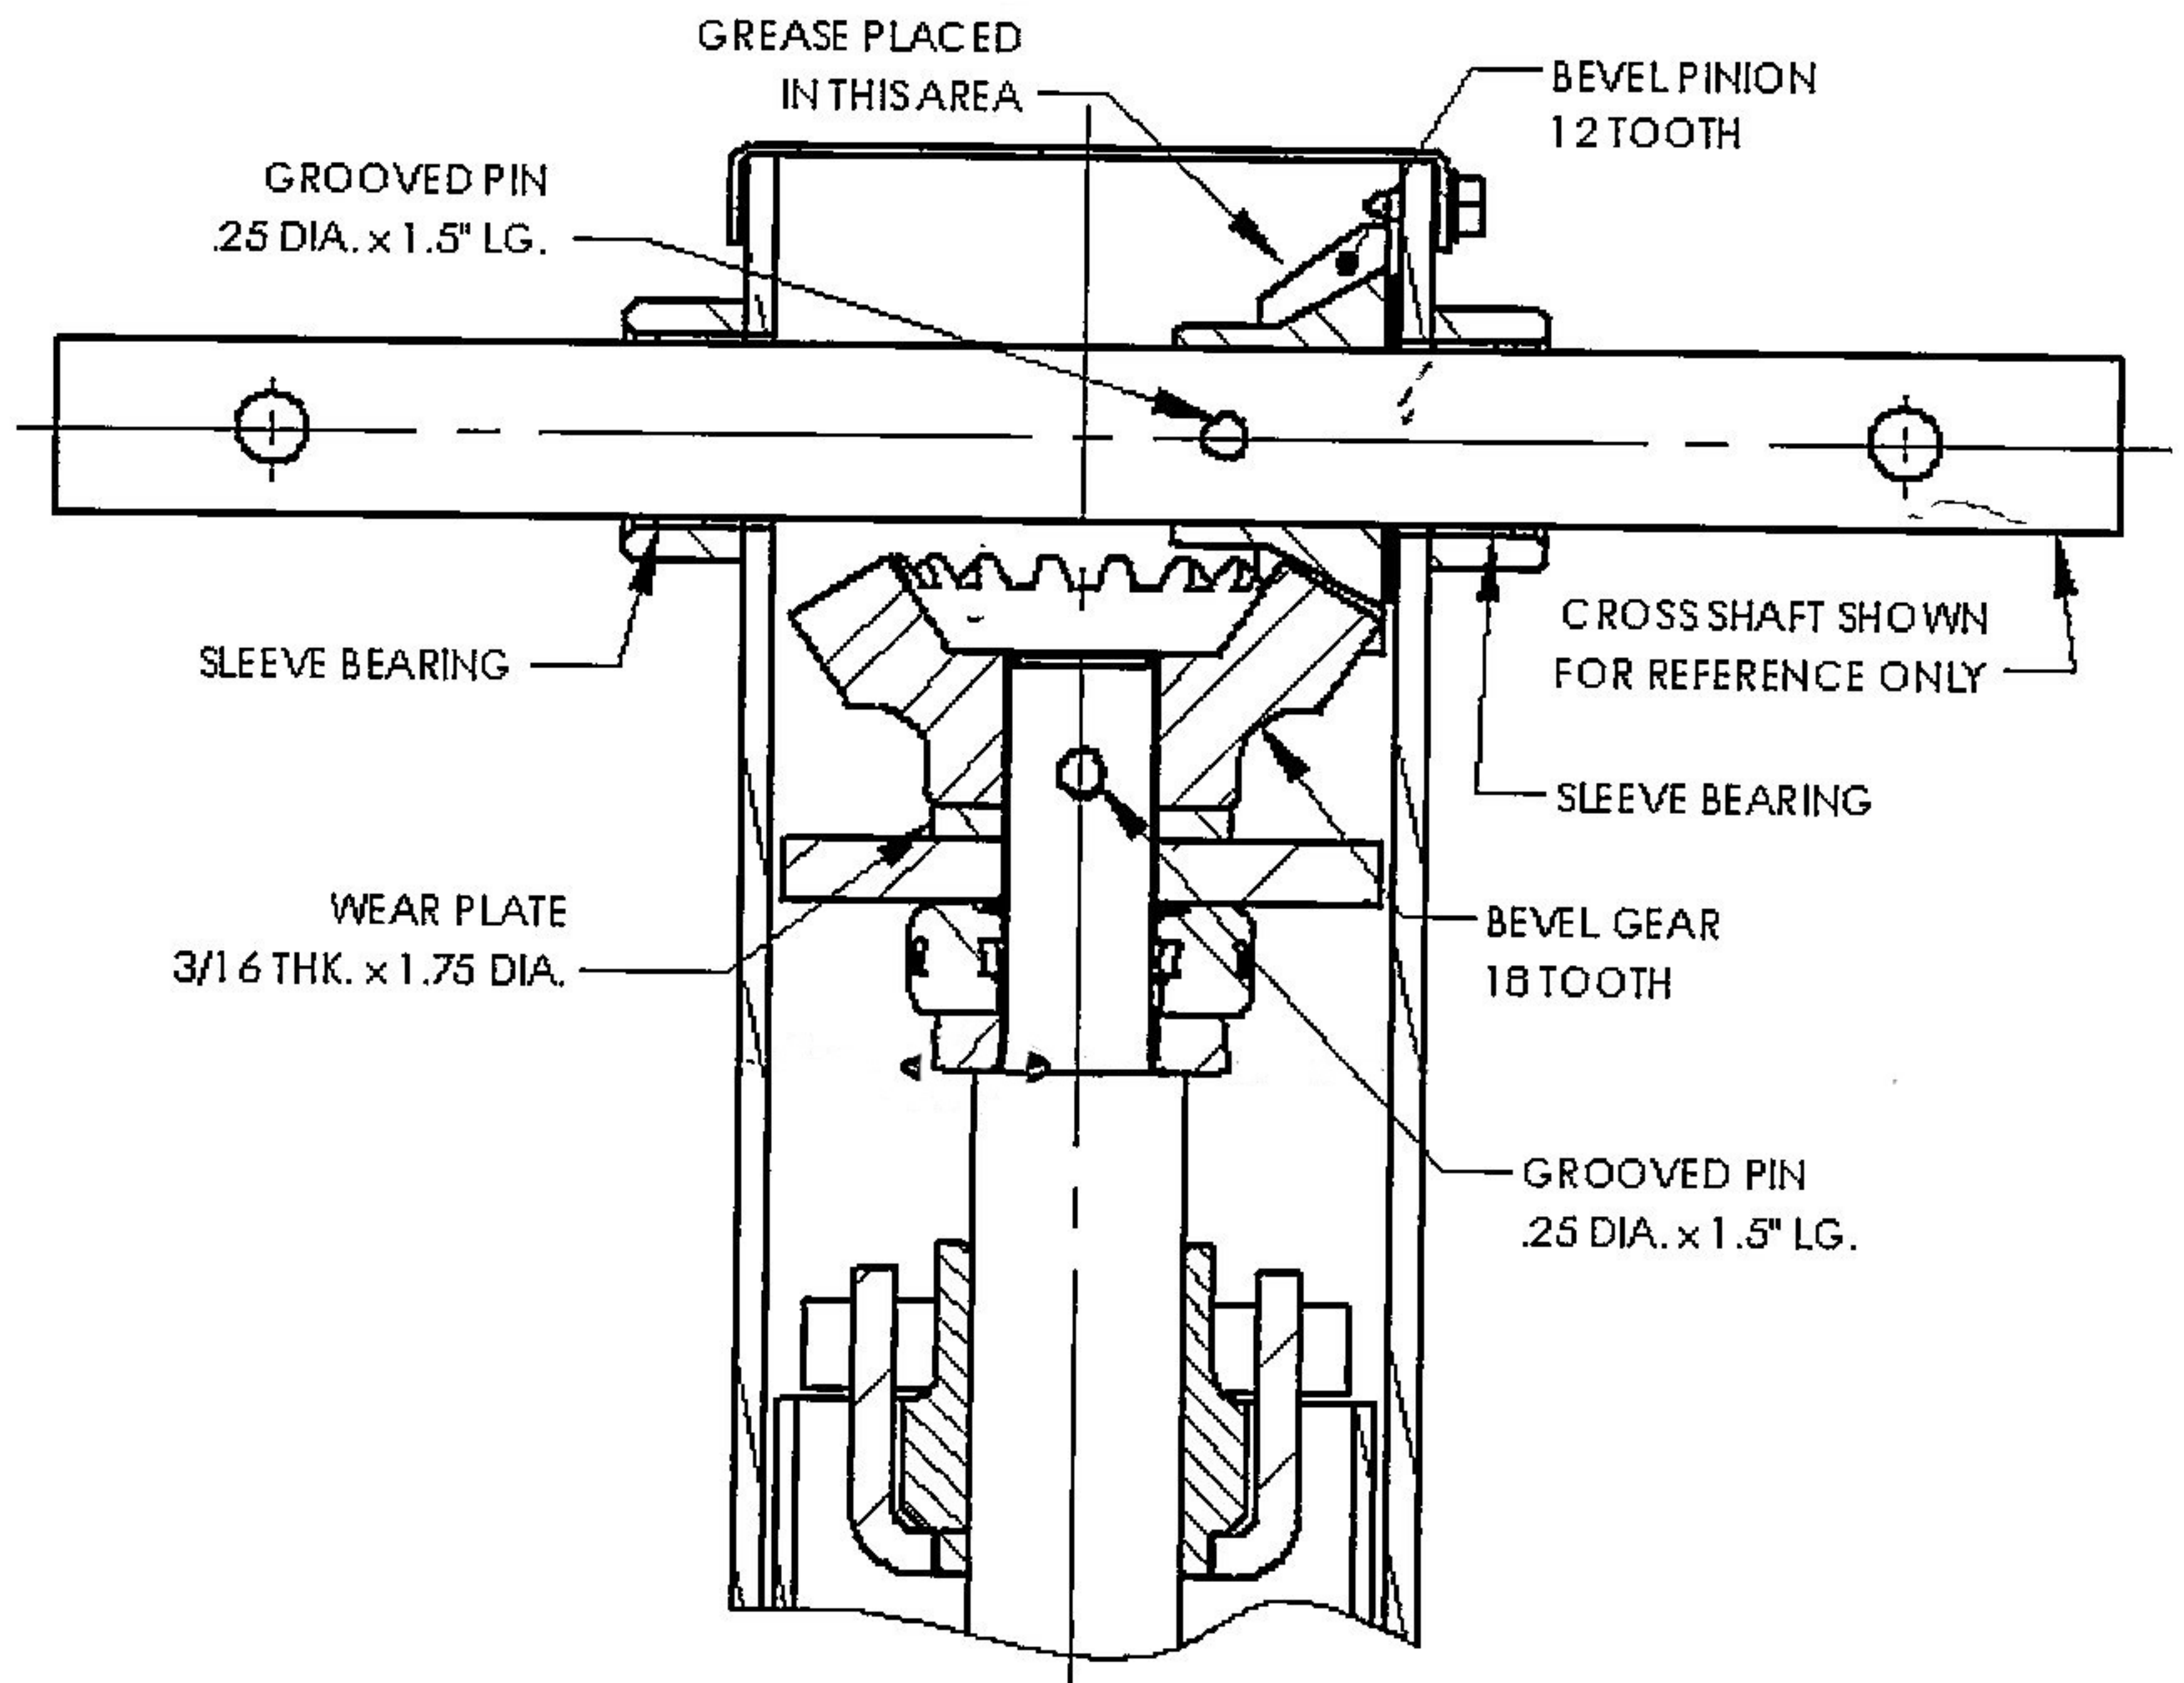


Note:


* A liberal amount of automotive quality grease should be applied to the bevel gears and all other mating surfaces.

Gear Kit P/N 500212

(Jan 05 and Newer)

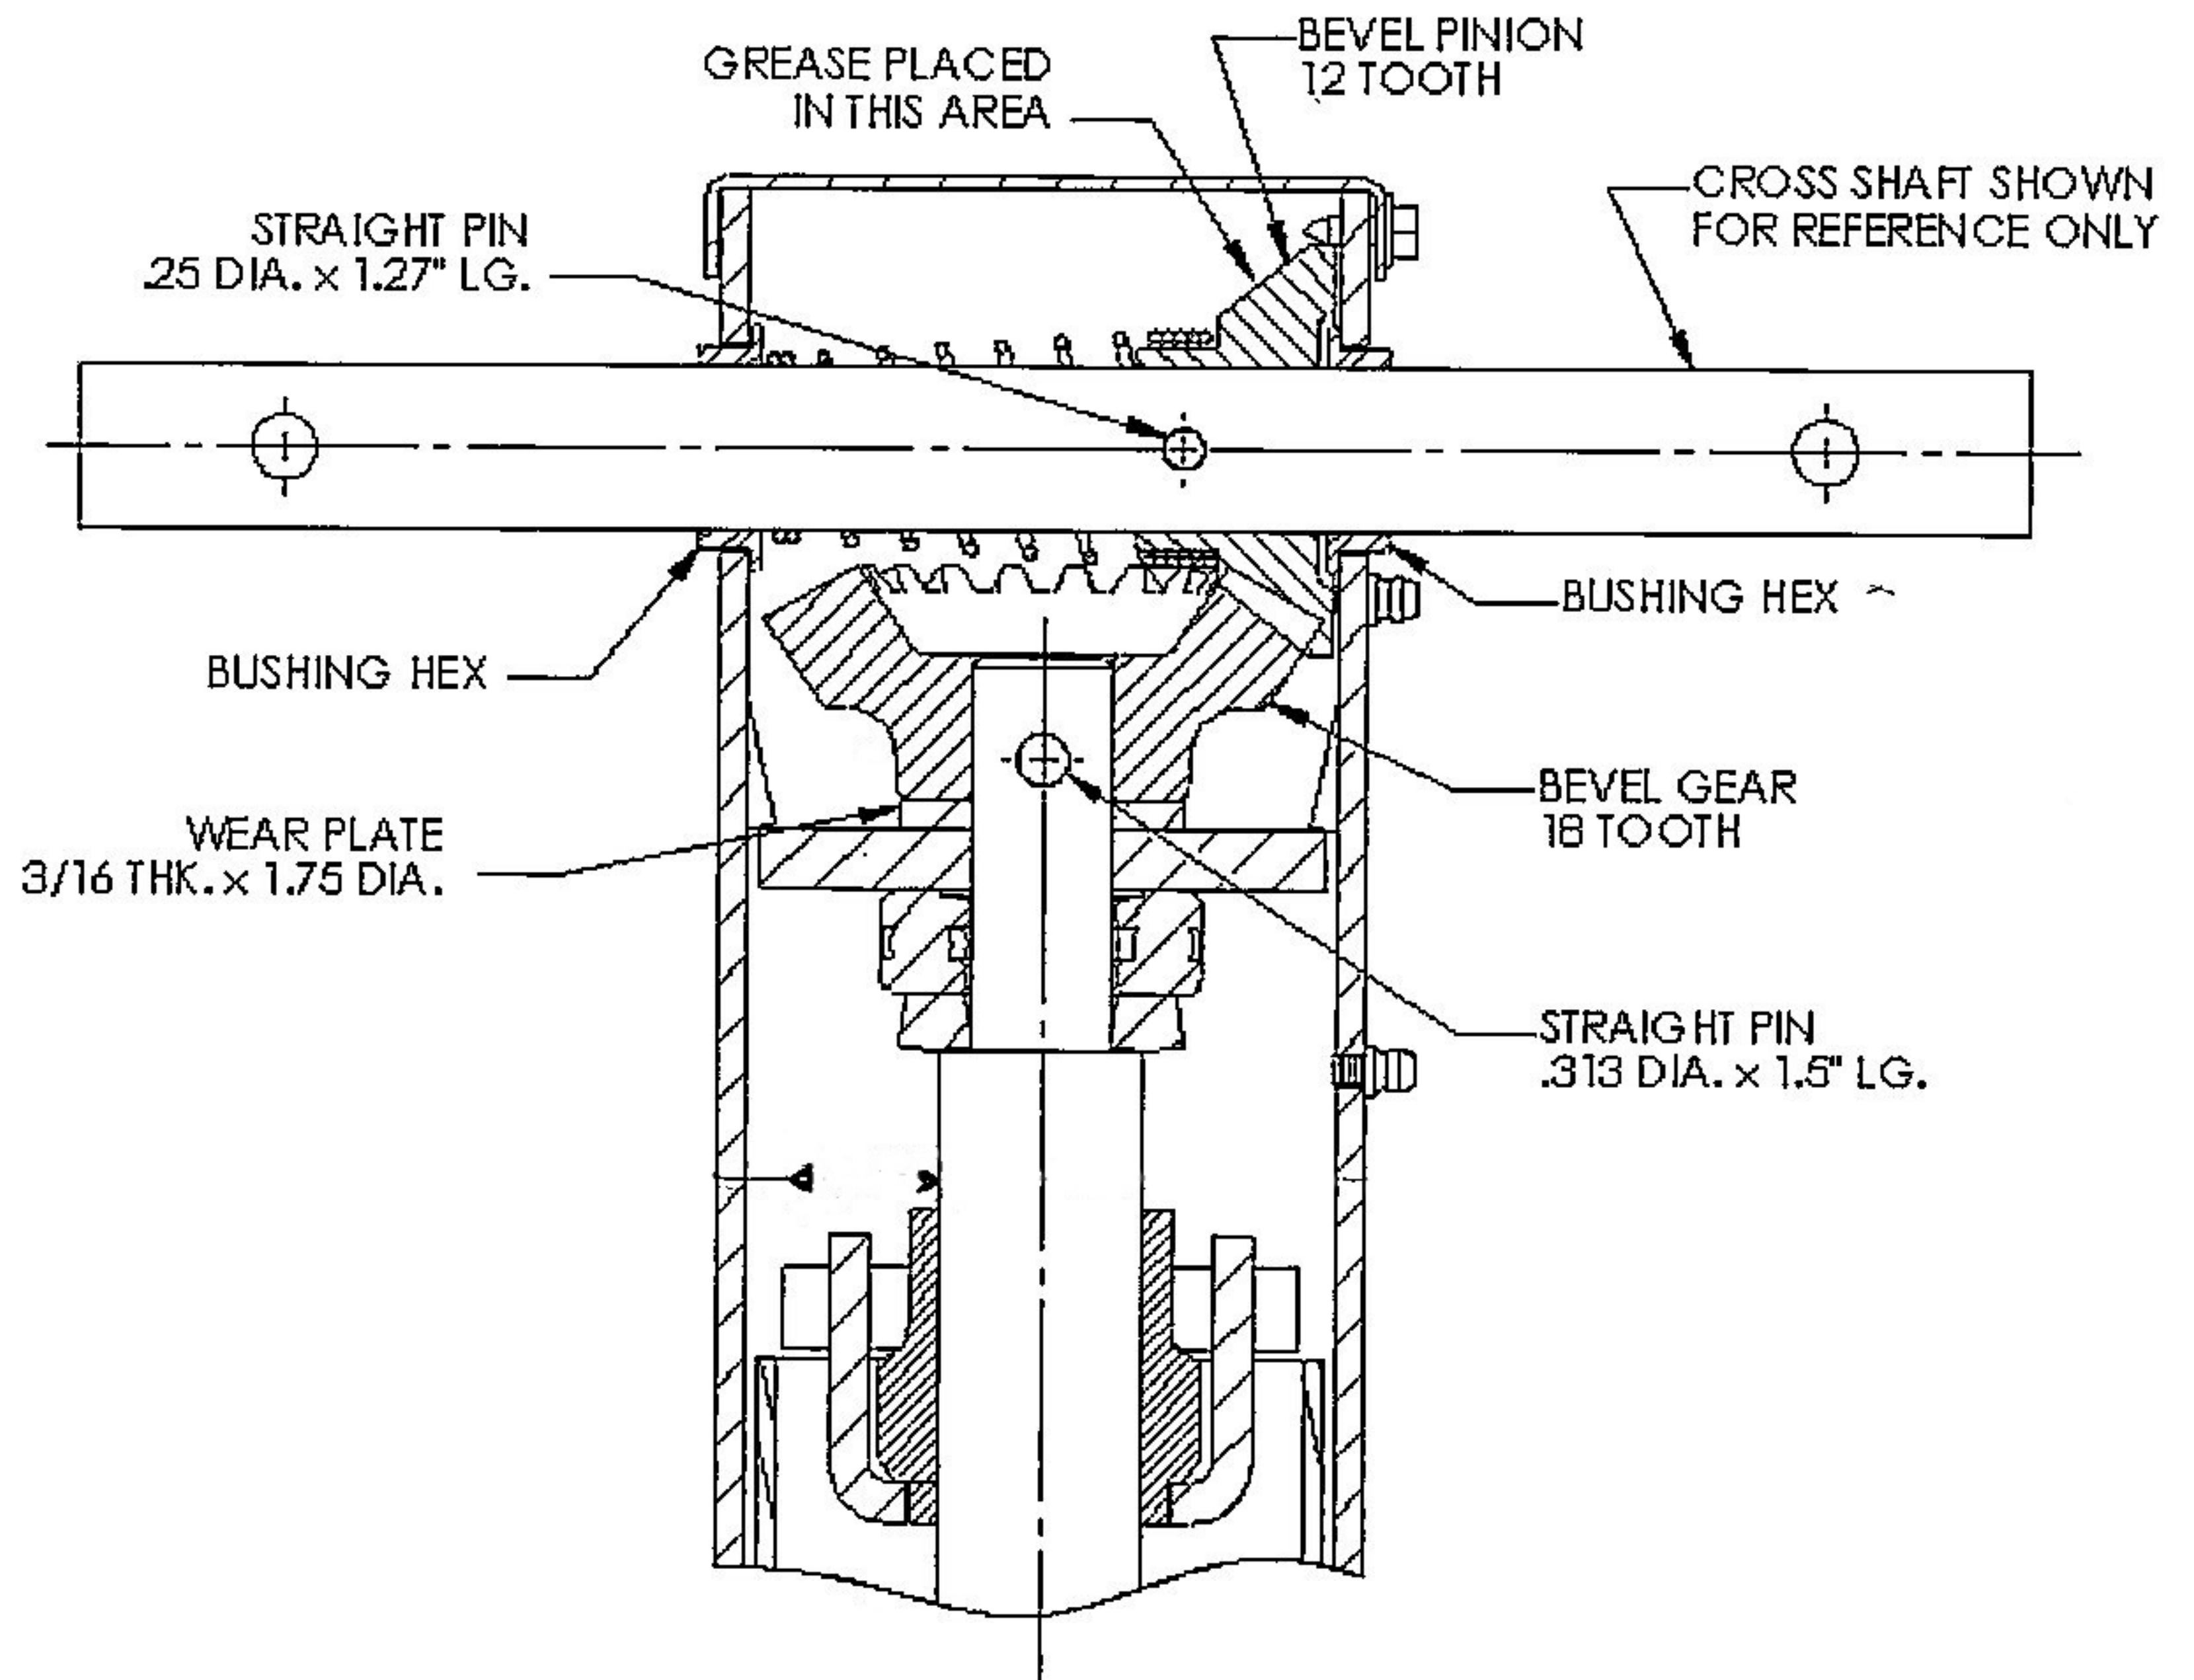

Screw & Nut Kit P/N 500217

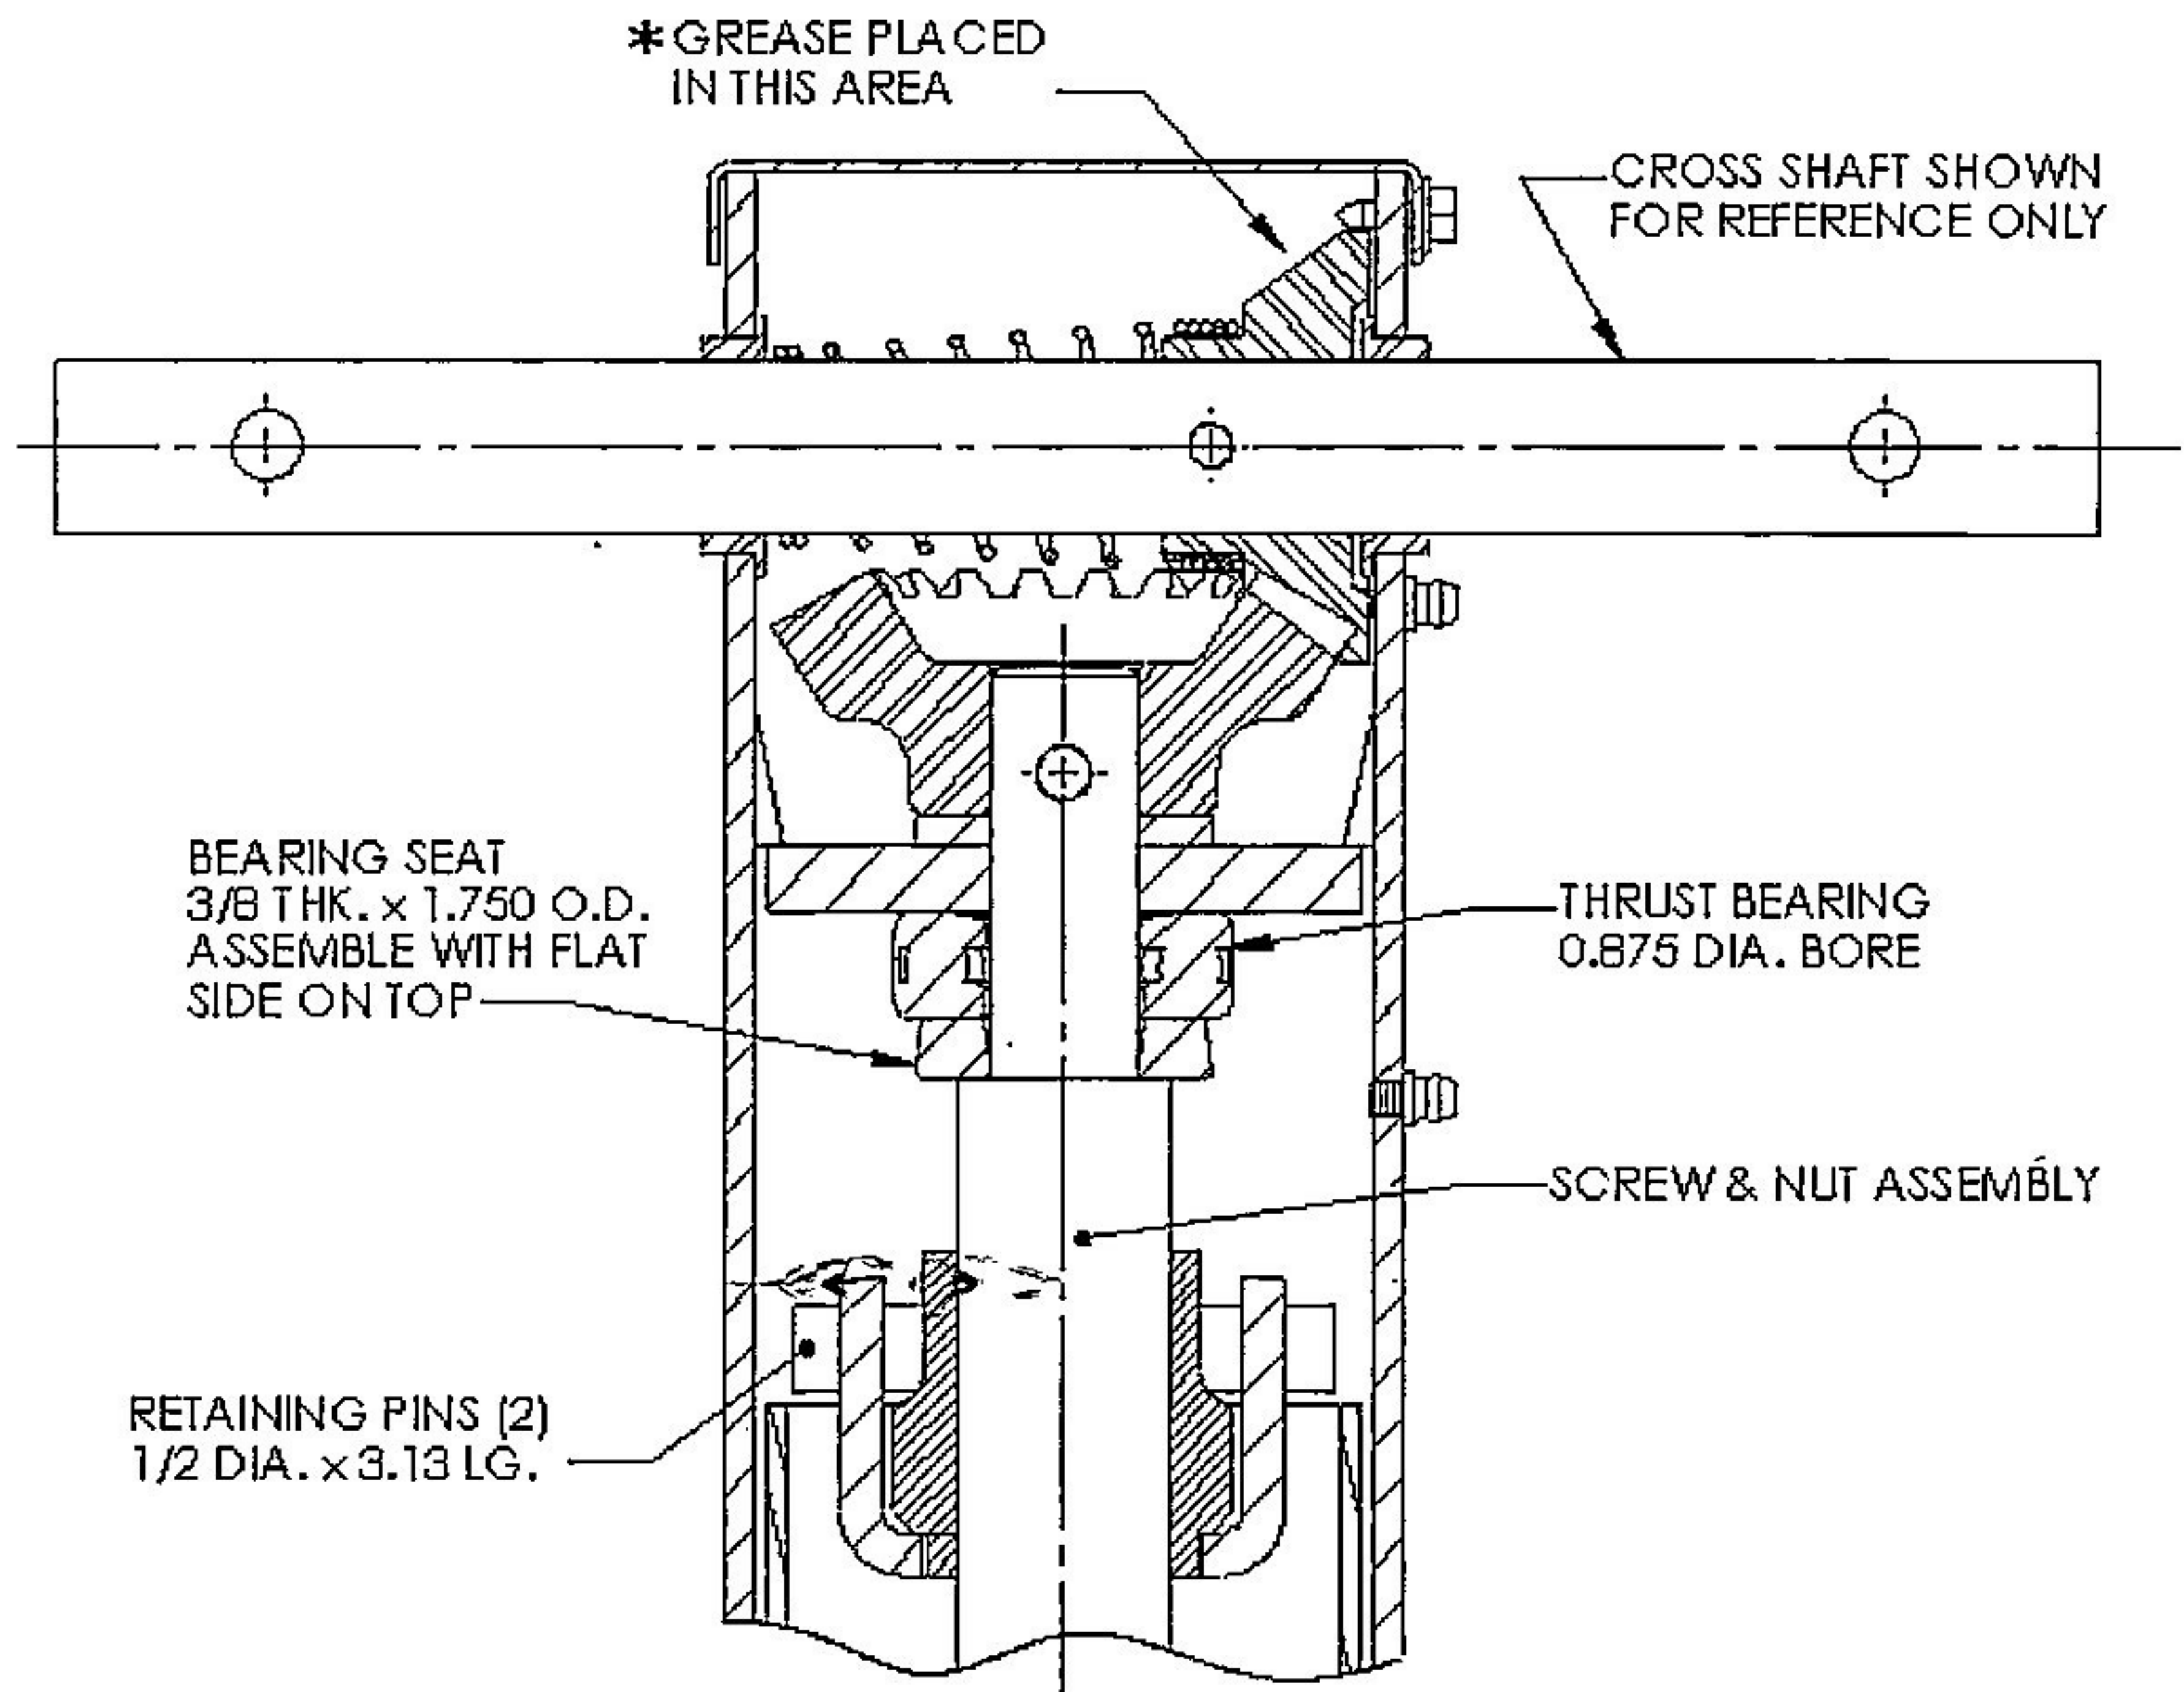

Note:

* A liberal amount of automotive quality grease should be applied to the bevel gears and all other mating surfaces.