

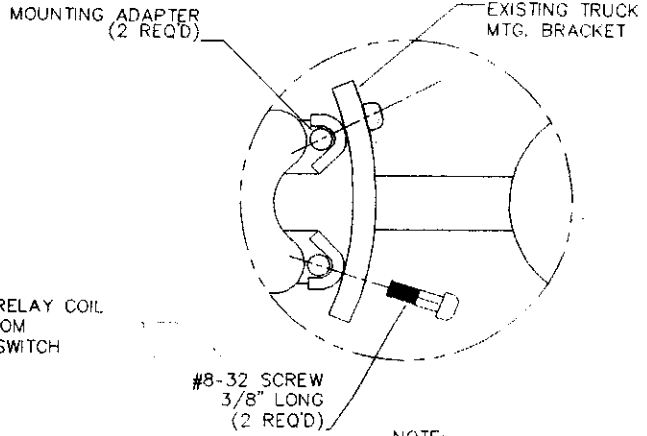


FIGURE #2
REAR VIEW OF
RELAY CONNECTOR
(VSM# 130)

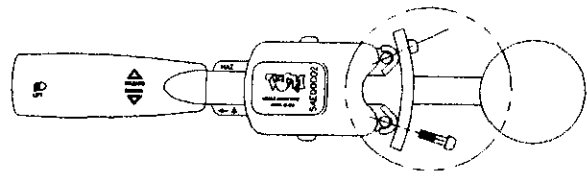

NOTE:
PLACE INSERTS IN MTG. BRACKET
AND DRIVE TWO SCREWS INTO
INSERTS AS SHOWN.

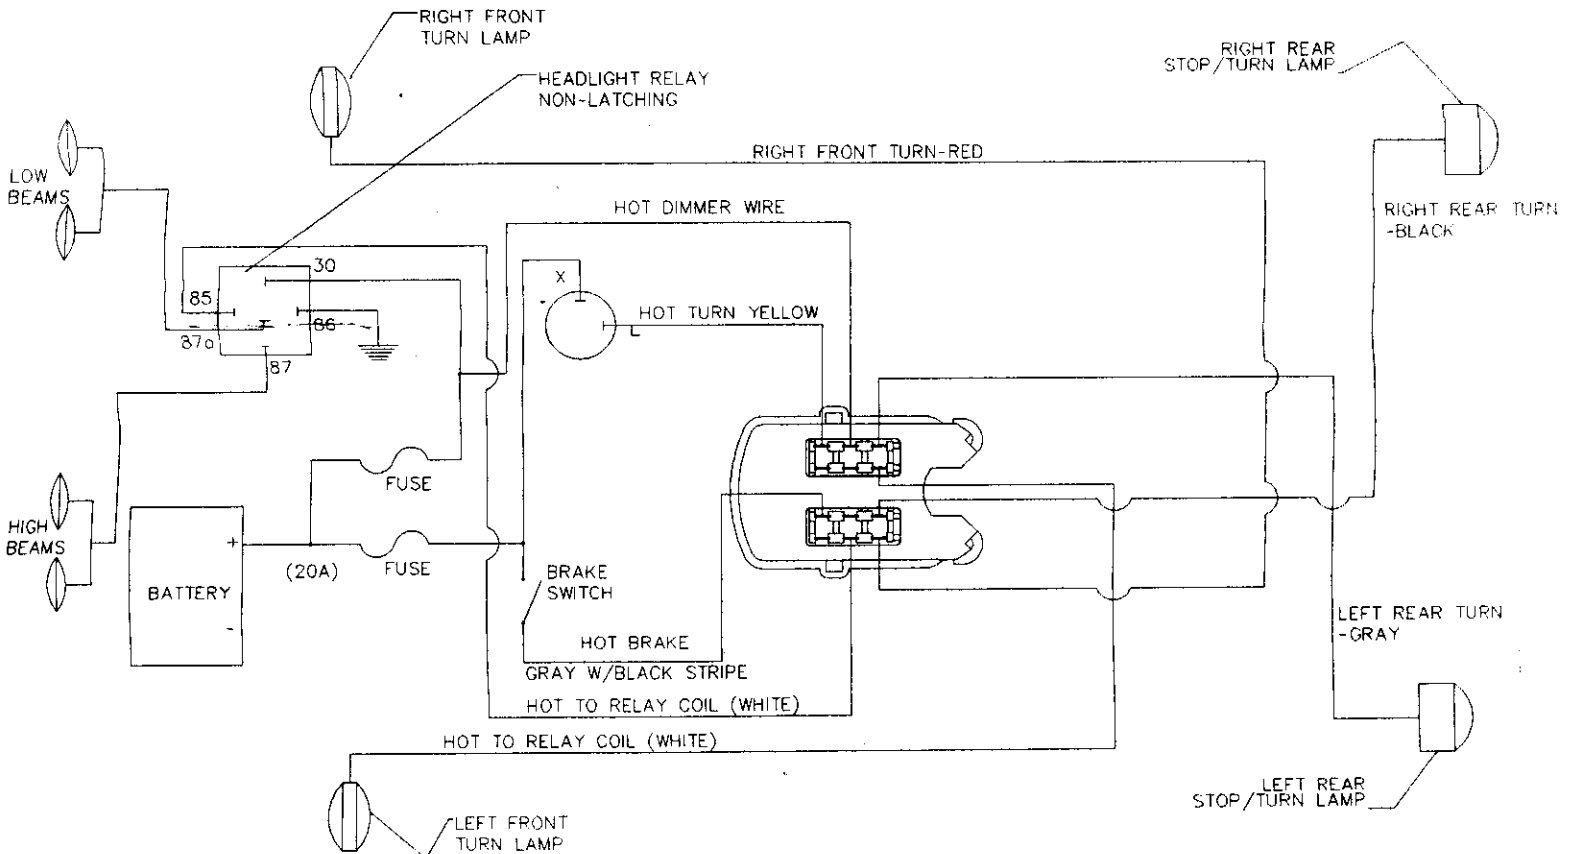

WIRING DIAGRAM