INSTRUCTIONS SHEET NO.
LA FEUILLE D'INSTRUCTIONS NO. **87719N**

MAKE / MODEL(S):

Dodge Grand Caravan
with Stow-N-GO Seats - 2005
Chrysler Town & country
with Stow-N-GO Seats - 2005

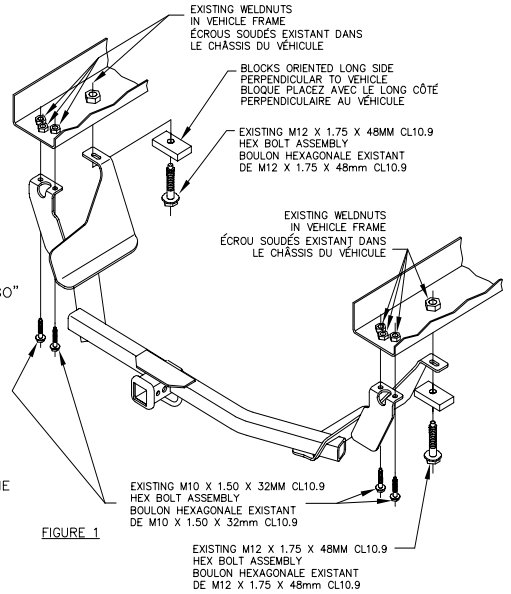

FIGURE 1

* ONLY FITS VEHICLES WITH STOW 'n GO SEATING
* SEULEMENT POUR LES VÉHICULES AVEC LES SIÈGES "STOW'n GO"

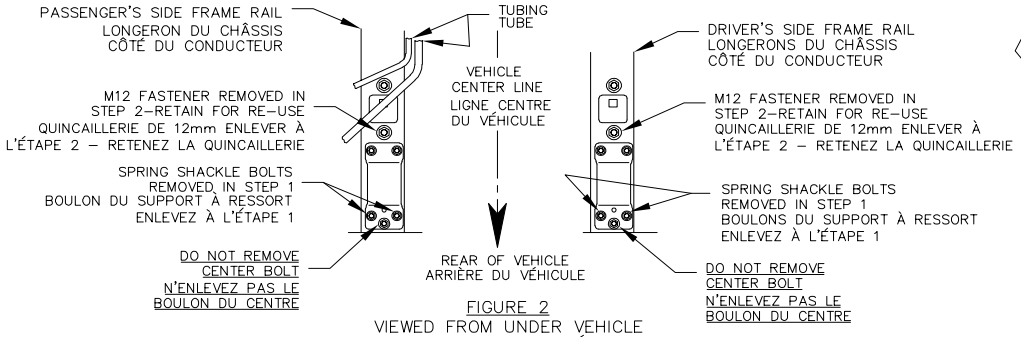

FIGURE 2
VIEWED FROM UNDER VEHICLE
VUE ENDESSOUS LE VÉHICULE

PARTS IDENTIFICATION / IDENTIFICATION DES PIECES (HARDWARE KIT NO. 87719F)

A) Receiver assembly

A) Attelage

TOOLS REQUIRED: 15 & 18mm socket, ratchet or impact gun to suit; 100 FT/LB torque wrench.
OUTILS REQUIS: 15 & 18mm manche à rochet ou clé à chocs si nécessaire; clé dynamométrique à 100 lb-pi.

INSTRUCTIONS:

1. Remove (2) rearmost spring shackle mounting bolts, each side, as shown in fig. 2. Retain bolts for hitch installation. **NOTE:** Remove only the two outer bolts on each frame rail as shown. It is not necessary to remove centre bolts.
2. Remove M12 bolt, just forward of spring shackle, each side, and retain for hitch installation.
3. To raise hitch into position, it will be necessary to pivot one side of hitch as far forward toward axle as possible to manipulate forward mounting tab over leaf spring, then pivot that side into position. Repeat on other side. **NOTE:** If spring shackle interferes with installation, use screwdriver to gently pry shackle clear of hitch side bracket. After installation, proper clearance will exist.
4. Install fasteners as shown, Re-using existing M 10 and M 12 fasteners at all attachments.

   Tighten 10mm CL10.9 fasteners to 53 lb.-ft.
   Tighten 12mm CL10.9 fasteners to 92 lb.-ft.

1. Enlevez les (2) boulons du support à ressort de chaque côté, comme indiqué dans la figure 2. Retenez les boulons pour l'installation de l'attelage. **NOTE:** Enlevez les deux boulons extérieur seulement du longerons du châssis comme indiqué. Il n'est pas nécessaire d'enlevez le boulon du centre.
2. Enlevez le boulon M12, devant le support à ressort, chaque côté, et retenez-le pour l'installation de l'attelage.
3. Levez l'attelage en position. Il sera obligatoire de pivoté et positioné un côté de l'attelage le plus prêt possible de l'essieu afin de manipuler l'attelage par dessus les lames à ressort, et pivoté de nouveau ce côté en place. Répetez cette étape pour le côté opposé. **NOTE:** Si le support à ressort cause de l'interferance, utilisez un tournevis et poussez le support de l'attelage pour éviter le support à ressort. Une fois installé, il y aura suffisament de place.
4. Installez la quincaillerie comme indiqué. Ré-utilisez la quincaillerie de M10 et M12 existant aux endroits d'attaches.

   Serrez la quincaillerie de 10mm CL10.9 à 53pi-lbs.
   Serrez la quincaillerie de 12mm CL10.9 à 92pi-lbs.

	MAX GROSS TRAILER WEIGHT/ POIDS BRUT DE REMORQUE	MAX TONGUE WEIGHT/ POIDS MAX DU TIMON
WEIGHT CARRYING/ATTLEAGE AVEC RACCORD A BOULE	**3,500 lbs**	**350 lbs**
WEIGHT DISTRIBUTION/ATTELAGE AVEC BARRES DE TORSION	**4,000 lbs**	**400 lbs**

Warning: This hitch is designed to safely carry the loads specified. Under no circumstances do we recommend exceeding the towing vehicle manufacturer's recommended vehicle towing capacities.
Avertissement: Cet attelage à été crée pour porter sans danger les charges prévues. En au cun cas vous ne devez dépasser les normes de capacités de remorquage établies par le fabricant de votre véhicule.