


INSTALLATION INSTRUCTIONS

Adjustable Rear Stabilizer Bar

Thank you for purchasing a quality Hellwig Product.

PLEASE READ THIS INSTRUCTION SHEET COMPLETELY BEFORE STARTING YOUR INSTALLATION

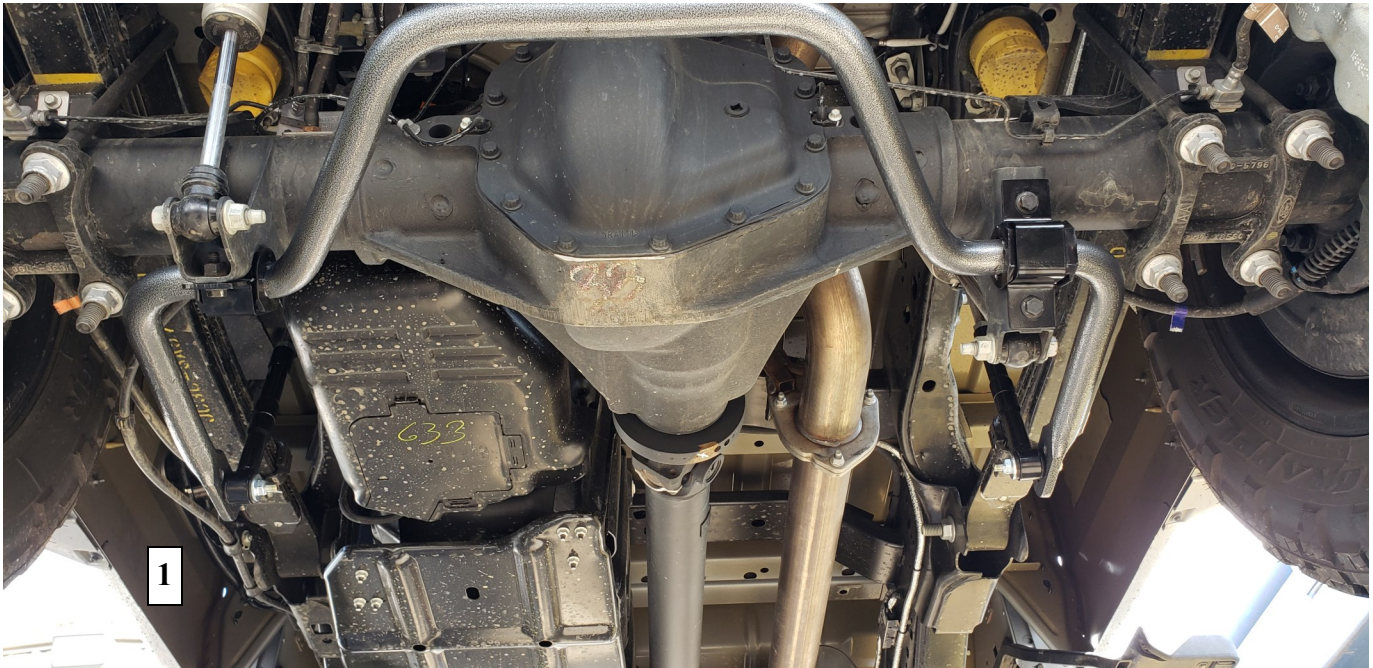

Hellwig PRODUCTS.com

559-734-7451 800-367-5480 TechSupport@HellwigProducts.com

TORQUE TABLE

BOLT SIZE: 3/8" = 20-30 ft. lbs. - 7/16" = 35-45 ft. lbs. - 1/2" = 50-70 ft. lbs. - 9/16" = 70-90 ft. lbs.


SAFETY: BEFORE STARTING YOUR INSTALLATION, BE SURE TO SET PARKING BRAKE AND CHOCK THE WHEELS.

NOTE: TO EASE INSTALLATION AND TO PROPERLY ADJUST BAR, THE WEIGHT OF THE VEHICLE MUST BE ON THE SUSPENSION, AS IF DRIVING DOWN THE ROAD. DO NOT RAISE THE VEHICLE BY FRAME.

NOTE: THIS UNIT IS DESIGNED TO REPLACE THE FACTORY INSTALLED REAR ANTI-SWAY BAR OR AS AN ADDITION IF THE REAR ANTI-SWAY IS NOT FACTORY SUPPLIED.

NOTE: THIS KIT INCLUDES LOCK NUTS WHICH REQUIRE TIGHTENING WITH A WRENCH AFTER BEING STARTED BY HAND.

1. Remove the factory installed rear anti-sway bar (if equipped) and all factory supplied hardware.
2. Lubricate and place the D-shaped poly-bushings onto the straight areas of the bar on each side of the center clearance hump. Place the square U-plates over the flat side of the bushings on the bar.
3. Bolt the U-plates to the shock mounts on the opposite side of the shock using the included M10 bolts. See Photos 2 and 3. Leave loose at this time.
4. Locate the end links and assemble with the poly bushings and 9/16" jam nut as in Diagram below. Insert the 5/8" ID hourglass bushings and matching inserts in the loops of the female end link that will attach to the frame rail. Insert the 5/8" ID hourglass bushings and matching inserts in the loops of the male end link that will attach to the sway bar. Lubricate hourglass bushings and insert first and then lubricate the outside and insert sleeve.
5. If your vehicle came with a factory rear sway bar, attach the end link to the frame bracket where the factory end link was bolted. Then skip Step 6.
6. If your vehicle did not have a factory rear sway bar, fish the frame bracket into the square hole as shown in Photo 4 and 5. Bolt it in place using the included 5/8" hardware so the lower hole hangs below the frame.
7. Attach the end links to the frame rail as shown in Photo 5 using the shorter 7/16" bolt, washers and locknut.


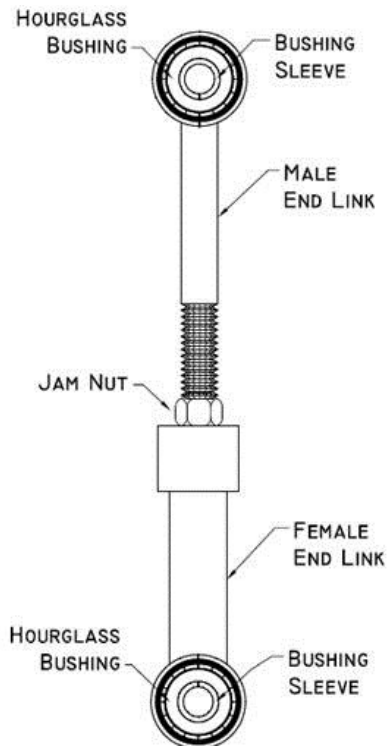


Hellwig PRODUCTS.com

559-734-7451 800-367-5480 TechSupport@HellwigProducts.com

8. Center sway bar on the differential. Be sure to move any lines, wires or hoses on the axle or the inside of the frame to avoid any damage. Rotate bar up and down to make sure there is adequate clearance to all axle and undercarriage components as the suspension articulates. When bar is centered and proper clearances verified, tighten shock mount U-plate bolts.
9. Attach lower end of end link to outer hole of sway bar as shown in Photos 6 and 7 using the longer 7/16" bolt, washer and locknut. Adjust end link length so that end link bolt will clear fuel tank and keep the sway bar arms as parallel to the ground as possible. Tighten 7/16" bolt to 35-40 ft-lb. Tighten 9/16" adjustment nut on end link to 70 ft-lb.
10. Bounce the vehicle checking for clearance on all undercarriage components shocks, exhaust etc. Test drive the vehicle and recheck your installation. **Recheck periodically on a regular basis thereafter.**
11. The sway bar arms have three mounting holes. Mounting the sway bar on the outer hole is the nominal position. For firmer settings, use the inner holes. We recommend starting with the outer mounting hole until you are accustomed to the vehicles new handling characteristics. Then select the mounting point that best fits your driving style

ATTENTION INSTALLER: BE SURE THE CUSTOMER RECEIVES THIS INSTRUCTION SHEET, ALL WARNING AND NOTE CARDS AND THE WARRANTY FORM.

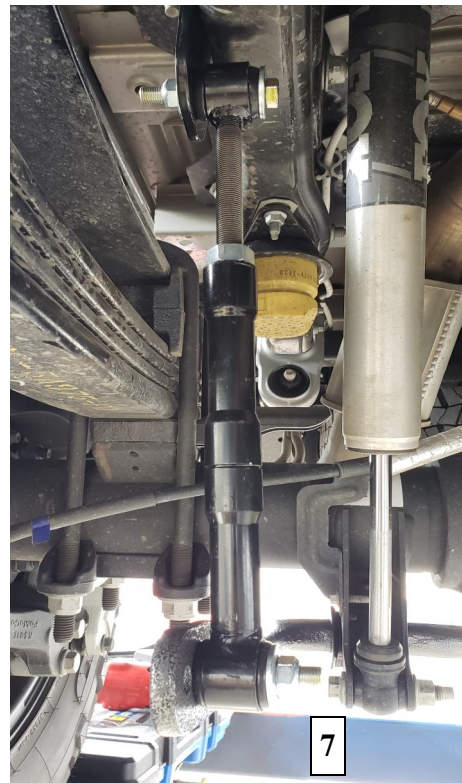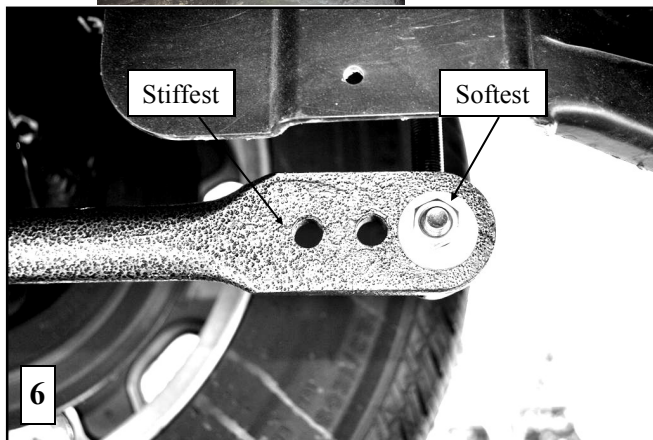

Maintenance and Inspection:

Your Hellwig Suspension Product is built to last. However, as with all vehicle systems, it requires routine inspection. Inspect your Hellwig installation looking for secure hardware and tight fitting brackets and bushings. If you do not perform this inspection, have your professional mechanic inspect as described.